

How to replace the Brush Sections on the Master Sweeper


Find a safe and level area to park the sweeper.

Lower the sweeper hood until the axle is 300mm off the ground. (This prevents the axle dropping too far when the brush sections are removed and causing miss alignment and damage at the drive end).

1. Loosen the grub screws on the bearing collar and remove bolt and washer



2. Remove the 2 M8x 20 bolts supporting the hood

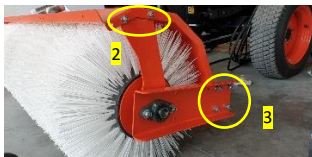

3. Remove the 4 M12 x 40 bolts
4. The end bracket will now slide off the brush axle



5. Remove shaft collar and large round plate
6. Replace the brush sections
7. Refit the bolts and tighten in reverse order as shown in steps 1-5